


6" Dia.

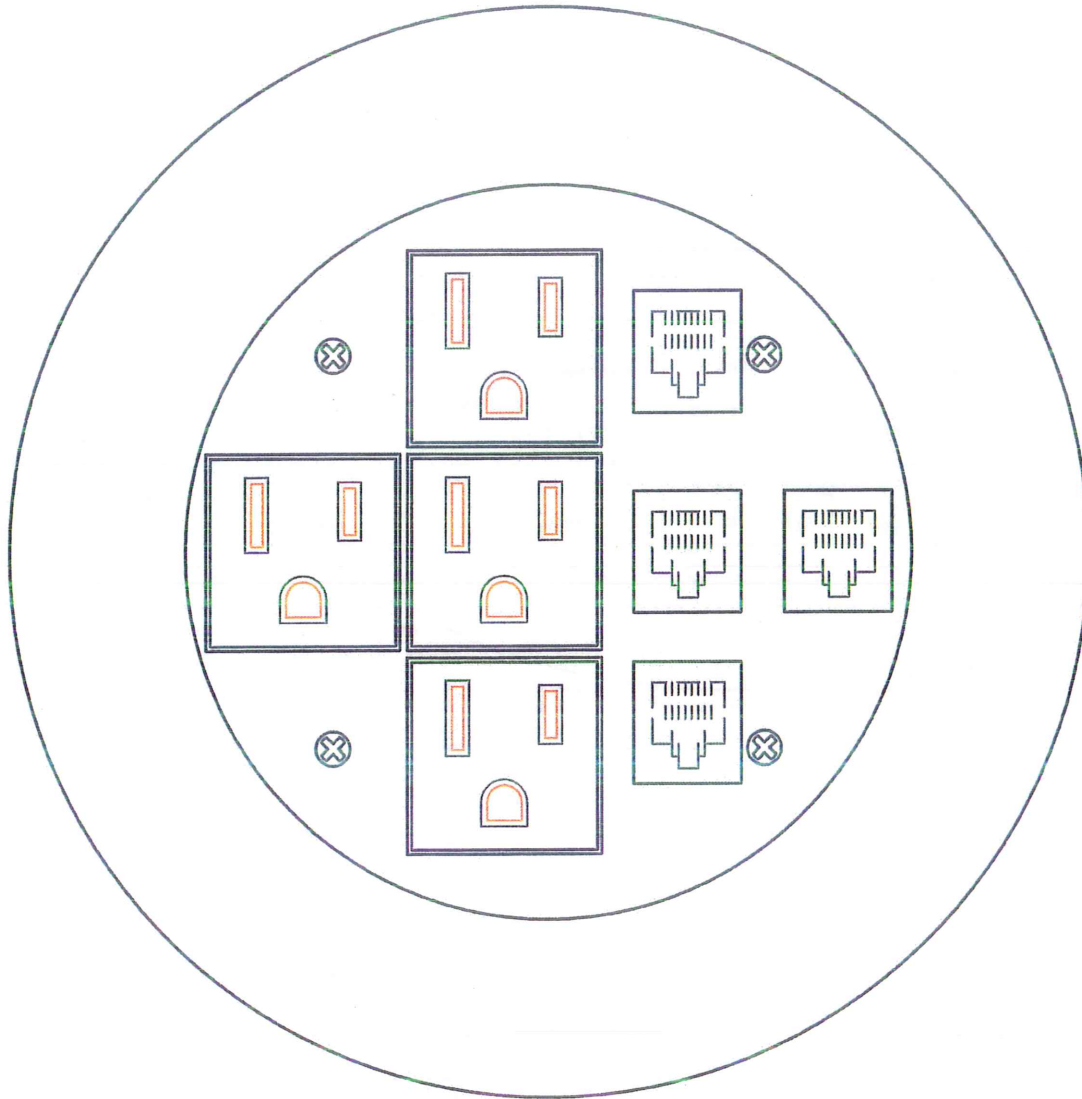

### MOI-PWR4-COMM4

4x15Amp single receptacles and 4 openings for COMM jacks  
 (openings suitable for all manufacturers Keystone style jacks)  
 COMM jacks not supplied or installed by Nocom Inc.

#### NOTE:

Single receptacles shall be 5-15RA . **5-20RA available.**  
 Keystone style openings or blanks or CSA/UL Recognized/  
 Classified or Listed comm jacks.

ORDERING INFO-(SEE ABBREVIATIONS)

SLAB THICKNESS \_\_\_\_\_  
 RECEPT.TYPE/colour \_\_\_\_\_  
 DATA MANUF./colour \_\_\_\_\_  
 COVER TYPE \_\_\_\_\_

**PROPRIETARY AND CONFIDENTIAL**

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF NOCOM. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF NOCOM IS PROHIBITED.


		DIMENSIONS ARE IN MM TOLERANCES: ANGLES: ± DEGREE LINEAR: ± MM (UNLESS SPECIFIED)	NAME	DATE	JOB TITLE:
			TJP	10-05-14	
			CHECKED		
			ENG. APPR.		
		MATERIAL	Q.A.		COMMENTS:
		See Variant Table			
NEXT ASST	USED ON	FINISH			
APPLICATION		DO NOT SCALE DRAWING			

**MULTICONNECT™**  
 by **NOCOM®**  
 888-225-2478 www.nocom.ca

SHEET	DWG. NO.	REV.
A	MOI-PWR4-COMM4	R5

SCALE=N.T.S. WEIGHT: SHEET 1 OF 3

# Residential Outlet flush with carpet or other 1/4" floor finish

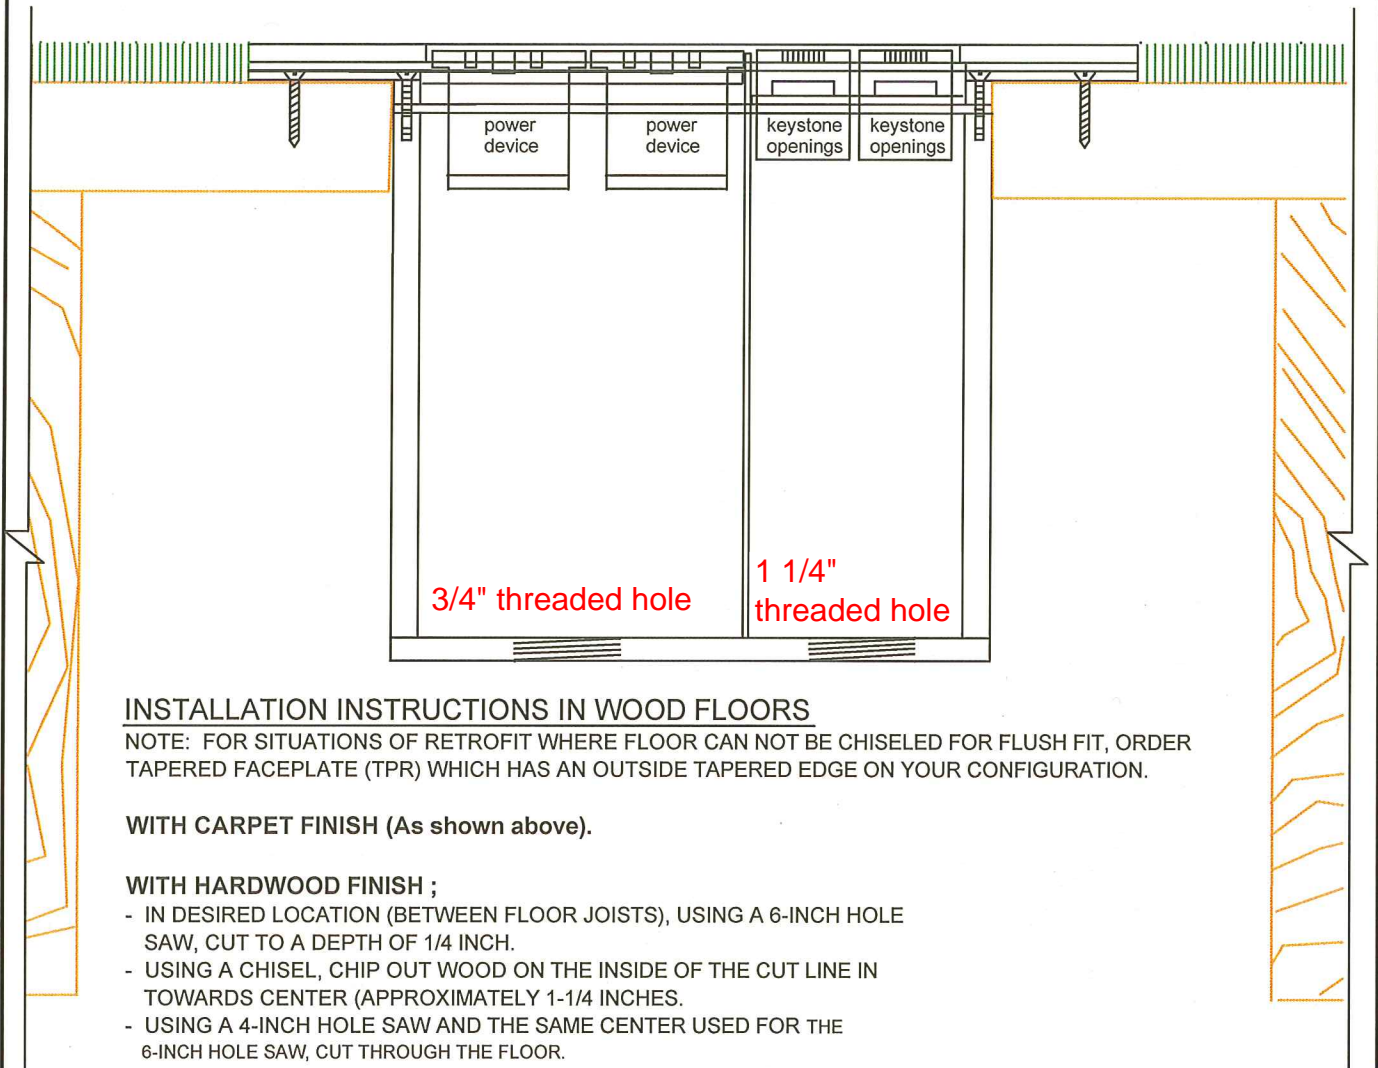

## INSTALLATION INSTRUCTIONS IN WOOD FLOORS

NOTE: FOR SITUATIONS OF RETROFIT WHERE FLOOR CAN NOT BE CHISELED FOR FLUSH FIT, ORDER TAPERED FACEPLATE (TPR) WHICH HAS AN OUTSIDE TAPERED EDGE ON YOUR CONFIGURATION.

**WITH CARPET FINISH (As shown above).**

### WITH HARDWOOD FINISH ;

- IN DESIRED LOCATION (BETWEEN FLOOR JOISTS), USING A 6-INCH HOLE SAW, CUT TO A DEPTH OF 1/4 INCH.
- USING A CHISEL, CHIP OUT WOOD ON THE INSIDE OF THE CUT LINE IN TOWARDS CENTER (APPROXIMATELY 1-1/4 INCHES).
- USING A 4-INCH HOLE SAW AND THE SAME CENTER USED FOR THE 6-INCH HOLE SAW, CUT THROUGH THE FLOOR.

### WITH CERAMIC TILE FINISH;

- INSTALL MULTICONNECT UNIT BEFORE TILE INSTALLATION.

### MOUNTING (FOR ALL TYPES) ;

- REMOVE TOP COVER TO TOTALLY EXPOSE CONFIGURATION PLATE.
- REMOVE CONFIGURATION PLATE (4 SCREWS) TO EXPOSE MOUNTING PLATE WITH MOUNTING HOLES
- FASTEN THE UNIT TO THE FLOOR WITH #6 STAINLESS STEEL WOOD SCREWS
- CONNECT WIRES TO SUPPLIED CONNECTORS.
- RE-ASSEMBLE CONFIGURATION PLATE TO UNIT
- INSERT COVER PLATE.

### ORDERING INFO-(SEE ABBREVIATIONS)

SLAB THICKNESS \_\_\_\_\_  
 RECEPT.TYPE/colour \_\_\_\_\_  
 DATA MANUF./colour \_\_\_\_\_  
 COVER TYPE \_\_\_\_\_



FROM:



105 WILLOWLEA ROAD,  
 OTTAWA ONT., CANADA  
 KOA-110  
 TEL.(613) 831-8102 FAX(613) 831-8103  
 TOLL FREE 1-888-225-2478 e-mail info@nocom.ca  
 web www.multiconnect.ca

JOB TITLE:

DRAWN BY:  
tjp

APPROVED:  
R.B.

DWG #

PWR4 COMM4  
 RESIDENTIAL  
 CROSS-SECTION

DATE:  
06-04-20

SCALE:  
n.t.s.

issue-R0